

DINOSAUR ELECTRONICS

(541) 994-4344

Instructions for the UIB L Rev. 7.0


This board should be installed by trained service technicians

This board comes from the factory configured as:

- Delayed, 3-try**
- 20 sec. delay, 6 sec. fire, 20 sec. between fire cycles**
- local flame sense
- 0.3 microamp flame sensitivity

**When the instant fire jumper is cut, the purge time between fire cycles is changed to 1 minute.

To change to instant-fire,
remove this jumper.

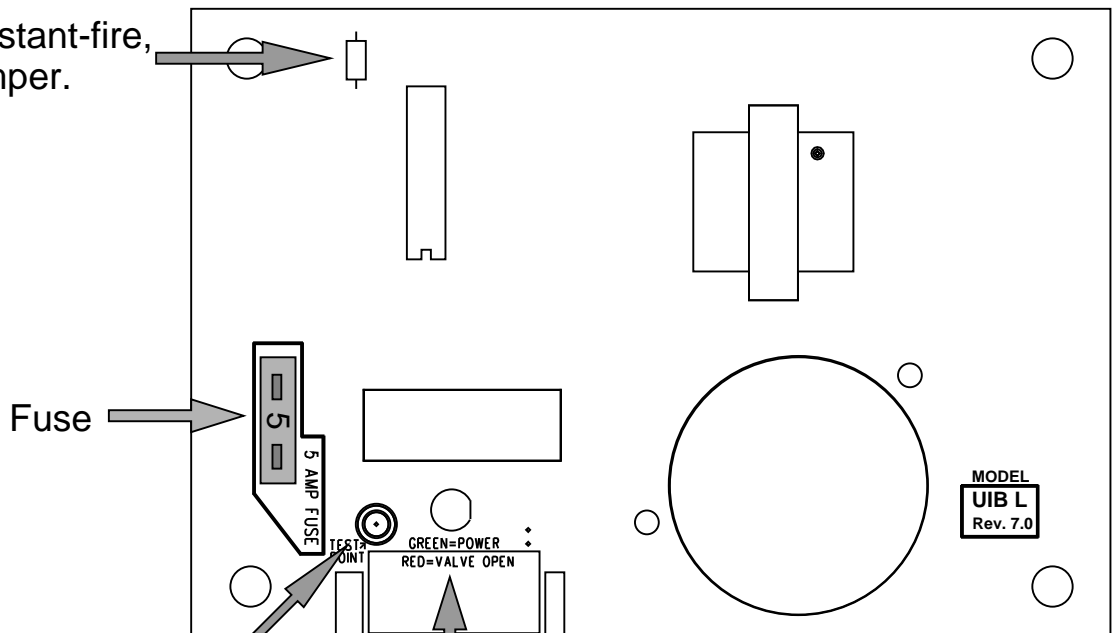

Touch the red probe of your multimeter to this point to check supply voltage to the board.
(should be between 10 and 19 volts on DC scale)

If this LED does not light up green, then check:
LIMIT SWITCH
SAIL SWITCH
5 AMP FUSE (on circuit board)