


Diagram for using a Dinosaur Electronics TDR in a Duo Therm® 66000 & 66100 series (pilot model) furnaces


IMPORTANT! READ THIS DOCUMENT COMPLETELY BEFORE ATTEMPTING ANY MODIFICATIONS.

The diagrams shown in this document represent before and after modification of Duo Therm® pilot model furnaces where the thermostat controls the furnace internally through the ground control circuitry. This modification will be necessary if you wish to use a Dinosaur Electronics “TDR” (Time Delay Relay) in these furnaces. This document is provided as a courtesy and is to be used AT YOUR OWN RISK! Dinosaur Electronics accepts no liability and provides no warranty whatsoever for the contents or use of this document. This modification should only be attempted by trained professional service technicians. Propane is an explosive gas! Failure to observe proper safety precautions or modifying the furnace incorrectly can result in serious injury or death. You assume full responsibility for any modifications made to the furnace using the information in this document.

Typical Duo Therm (pilot model schematic)

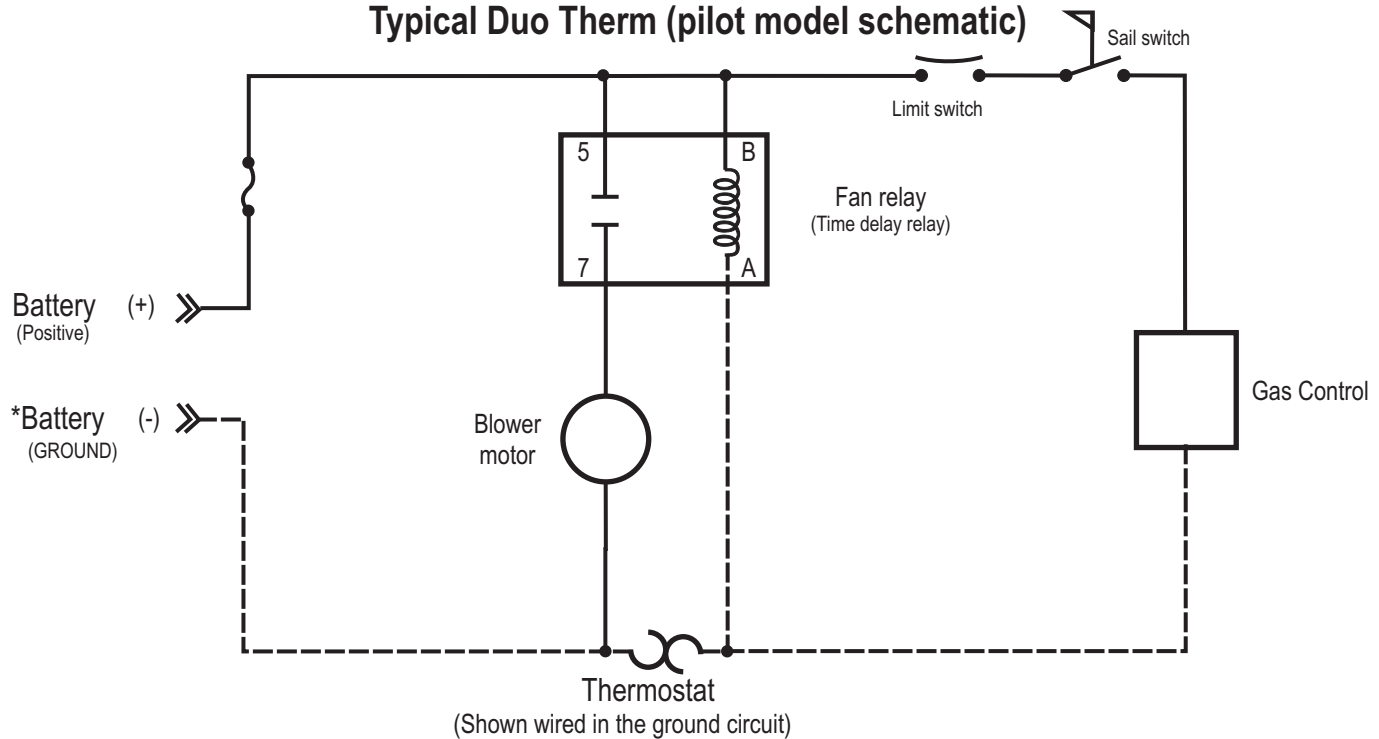

Duo Therm schematic with TDR shown after modification

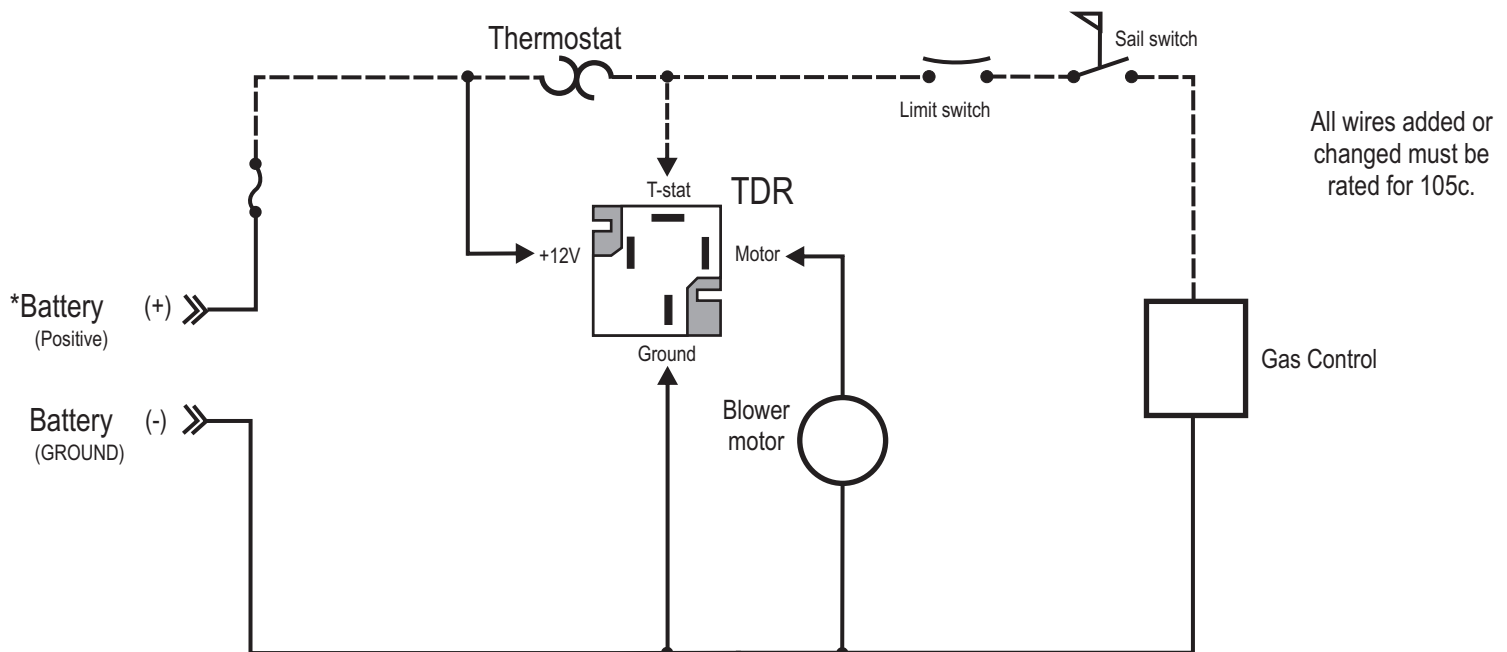

Note: Dashed lines indicate the thermostat control path